



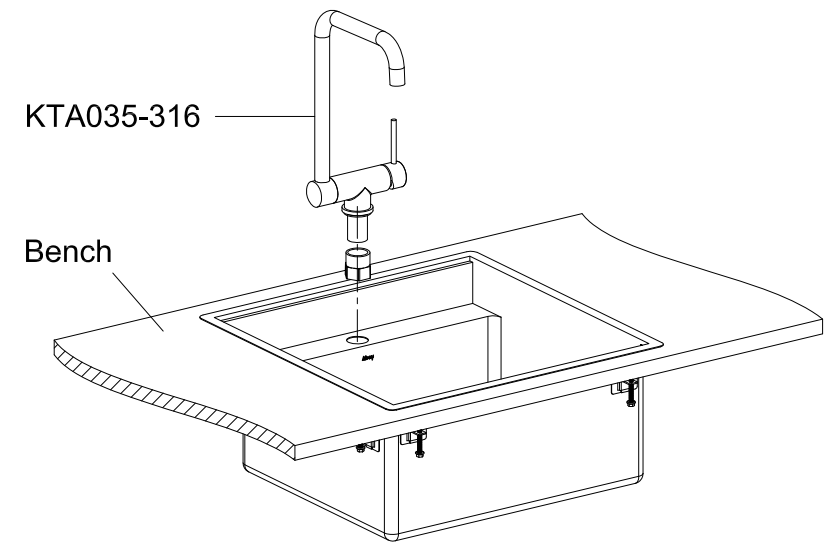

## Installation Diagram (FRAT500)

Step 1: Install sink using included clipping system.

Step 2: Use Abey Tap Installation Manual for KTA035-316.

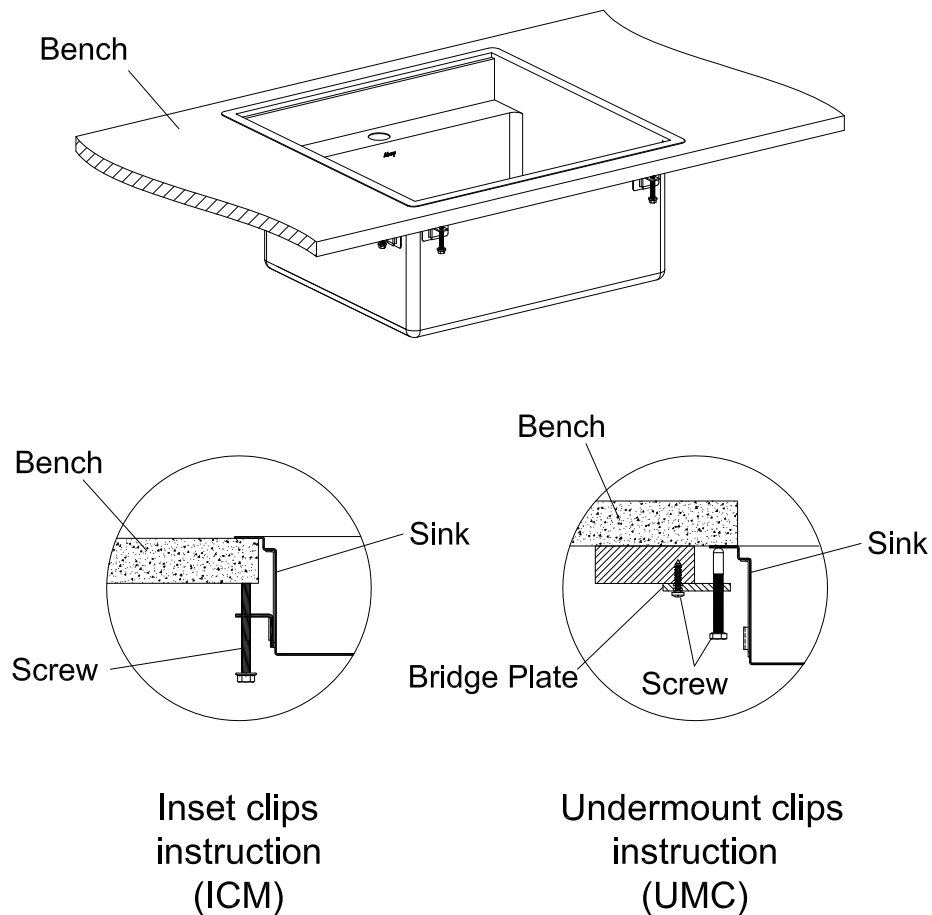




GARETH  
ASHTON

[www.abey.com.au](http://www.abey.com.au)

## TAP INSTALLATION



GARETH  
ASHTON

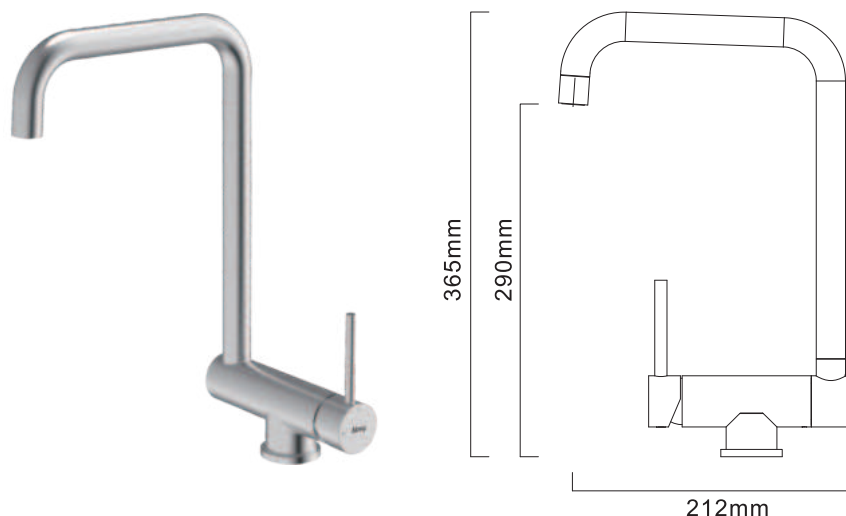

## Care and Maintenance

In order to ensure proper function over the lifetime of the tap, smoothly operate the handle and fold-down spout during use. When installing do not over tighten the locking nut. Regularly clean the tap with a soft, damp cloth and avoid abrasive cleaners, steel wool, and strong chemicals.

## Working Specifications

Working pressure: 20-100 psi

Working temperature: 1-60°C

This tap must be installed in accordance with the AS/NZS 3500 series standard. All Abey taps are strongly recommended to be installed by a licensed plumber. Improper installation may void the warranty.


## Notes

1. All pipework must be thoroughly flushed prior to installation as foreign materials may block the flow.
2. Aerator and the flow control can be removed with standard tool and cleaned.
3. If a screen-filter is fitted into the tap, remove it and flush the pipes and tap to remove grit. Then re-insert the screen.


KTA035-316-BR

## Parts List

- 1 Flat washer
- 2 Aerator
- 3 Elbow pipe
- 4 Circlip
- 5 O-ring
- 6 Fixed collar
- 7 Wear sleeve
- 8 Connector
- 9 O-ring
- 10 Body
- 11 Faucet cartridge
- 12 Gland nut
- 13 Spherical cover
- 14 Handle bar
- 15 Handle
- 16 Swing arm base
- 17 Wear sleeve
- 18 Fixed collar
- 19 O-ring
- 20 Fixed collar
- 21 Ball screw
- 22 Flat head screw
- 23 End cap
- 24 Base
- 25 Mounting screw
- 26 O-ring
- 27 Flat washer
- 28 Washer
- 29 Mounting screw
- 30 Braided hose(blue)
- 31 Braided hose(red)
- 32 Flat head screw
- 33 Coat

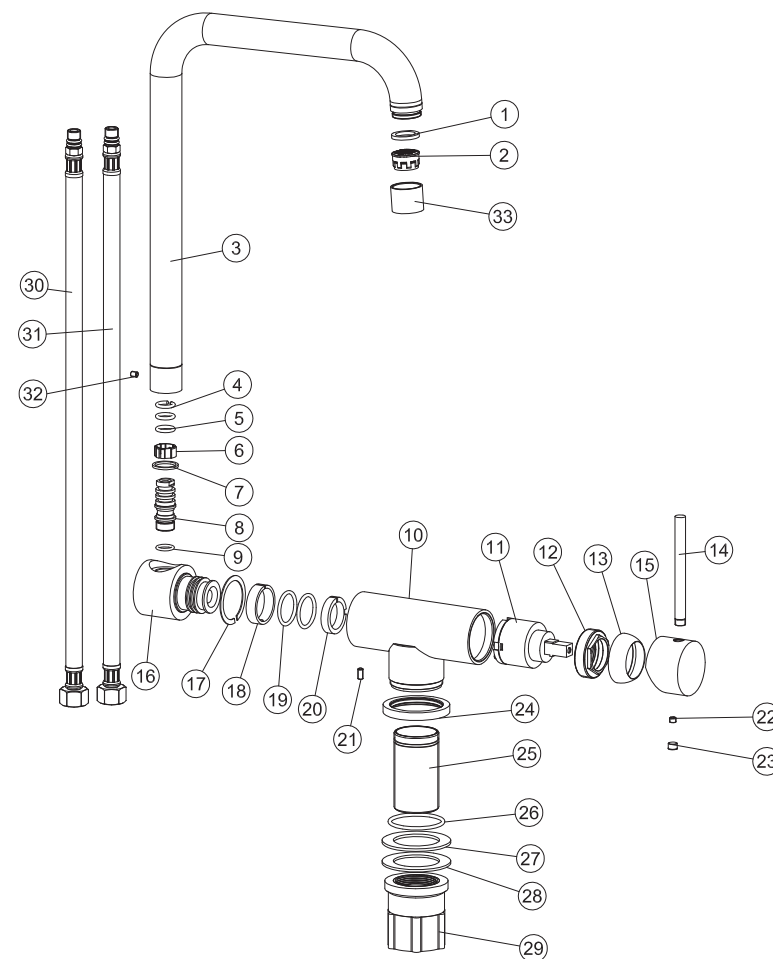


KTA035-316-BR

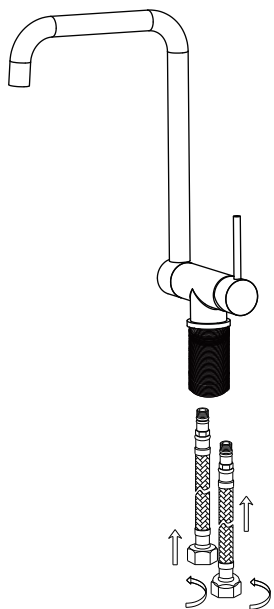

### Step 1


Attach the hoses (30,31) to the interior of the base and tighten firmly. Do not use thread tape, as the water-tight seal is provided by O-rings. Do not over tighten.

Note: Use the hose with RED braid-strands for the hot water connection. Connect hot water to the rigid pipe with red marking.

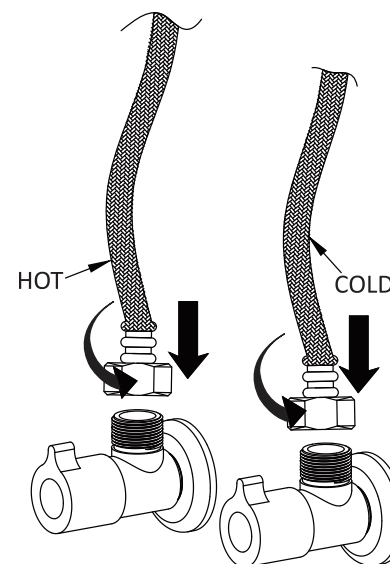

### Step 3


Flush the wall valves to ensure no grit enters the tap. Now attach the hoses to the wall valves ensuring the hose with RED braid attaches to the hot water outlet.

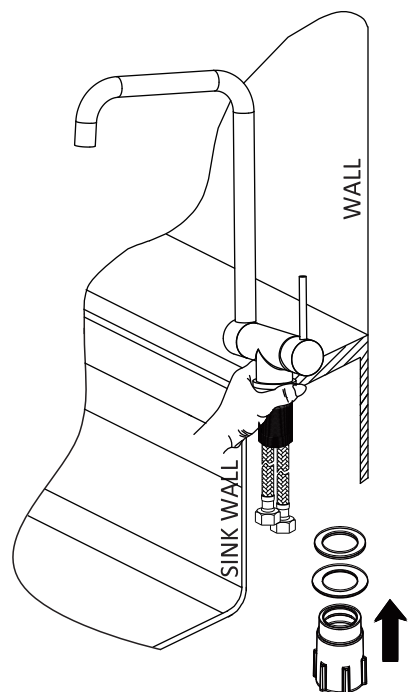

### Step 2

Insert the tap into tap hole on the sink tap-ledge and ensure the O-ring(26) is secure in the groove of the tap body. Then slide the washers (27 and 28) onto the threaded body of the tap followed by the nut (29) in the order shown in the diagram. Tighten the nut (29) by hand and ensure the tap is correctly aligned above the sink tap-ledge.

KTA035-316-BR

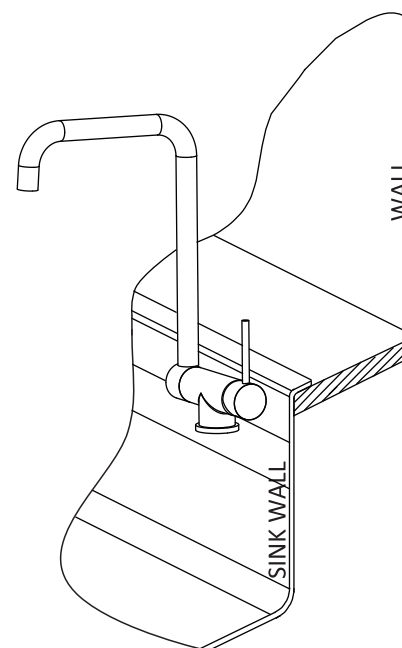


### Step 4


Test the tap flow and mix functions, and spout fold-down rotation. If any grit etc has entered the tap you can easily remove the aerator(2) and clean/reattach.

KTA035-316-BR




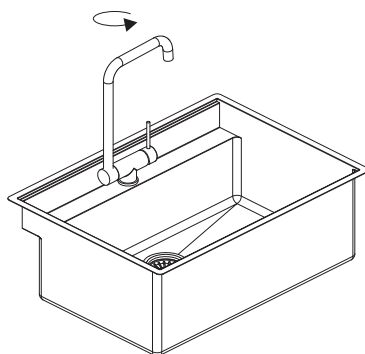

Function

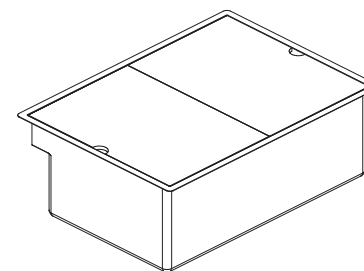

Covered

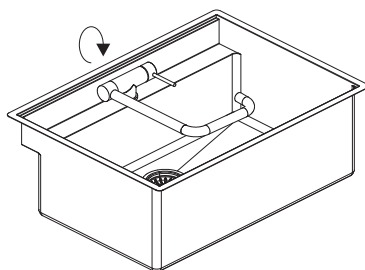

Fold-in

## Troubleshooting

1. If water is leaking from the connection tube joints you should retighten the Braided hose (30,31). It is possible that these connections have loosened when the flexible hoses are tightened to the wall valves.
2. If the water stream is uneven it is possible that debris or grit has blocked the aerator. You can remove the tip of the spout and backflush the aerator. Firmly retighten the retaining nut.
3. If the tap is loose or rotating at the base as it enters the countertop you should retighten the nut (29) ensuring the handle lever assembly is correctly positioned.
4. If the spout (3) is loose at the connection to the body (16) you may need to gently tighten the small grub screw (32). Do not over tighten the grub screw or the spout will not rotate.