

·FOWLER·

K5 Universal Instructions


NOTE: Valve must be installed in accordance with AS/NZS 3500.1

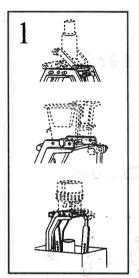


Remove button assembly from old valve.

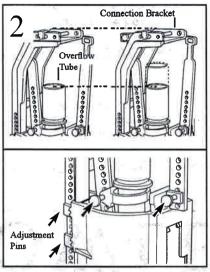


Remove old valve and place next to new valve on flat surface. Set height of the connection bracket by adjusting position of pins & cut Overflow Tube to match old valve. NOTE: This is critical to ensure Air Separation is maintained between the Overflow Tube and the Inlet Valve

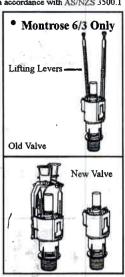

Remove connection bracket from new valve and replace with the Lifting Levers from the old valve. Continue with step 3.

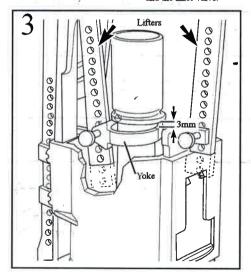

Ensure yoke sits approximately 3mm under overflow tube. Trim off excess lifter lengths.

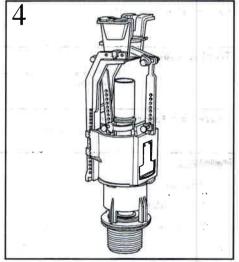

Attach old button assembly to new valve.