PARISI

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Water leaking into bowl.	Leaking outlet valve caused by debris in bottom of cistern stopping valve properly closing after flush.	Turn off stop cock. Remove outlet valve and clear debris.
	Leaking outlet valve caused by incorrectly installed or faulty seal.	Replace seal.
	Leaking Inlet valve.	Clean inlet valve.
		Replace inlet valve.
	Stop-cock or mini-tap leaking.	Tighten or replace stop-cock or mini-tap.
Water leaking onto floor.	Flush Pipe or P-trap waste connector leaking.	Remove pan and re-install pipe and connector ensuring proper sealing of pipes to ceramic outlets.
Loose seats.	Hinge pin bolts are loose.	Remove seat and tighten hinge pin bolts. (Refer seat installation guide)
Toilet seat or cover slamming closed.	Soft close hinges are faulty or damaged.	Replace soft close hinges- available as a spare part.

WARRANTY

Refer to our website for full warranty terms and conditions:

www.parisi.com.au/pages/warranty-information

WALL HUNG PAN INSTALLATION INSTRUCTIONS

PARISI

PN620 ELLISSE PN720 SLIM PN750 L'HOTEL PN780 LINFA











November 2023

INSTALLATION

INSTALLATION AND TESTING TO BE UNDERTAKEN IN ACCORDANCE WITH RELEVANT PLUMBING STANDARDS. PLEASE CHECK THAT ALL PARTS ARE INCLUDED AND COMPONENTS ARE NOT DAMAGED.

DO NOT INSTALL ANY DAMAGED COMPONENTS. CONTACT POINT OF PURCHASE FOR REPLACEMENT.















