


Installation

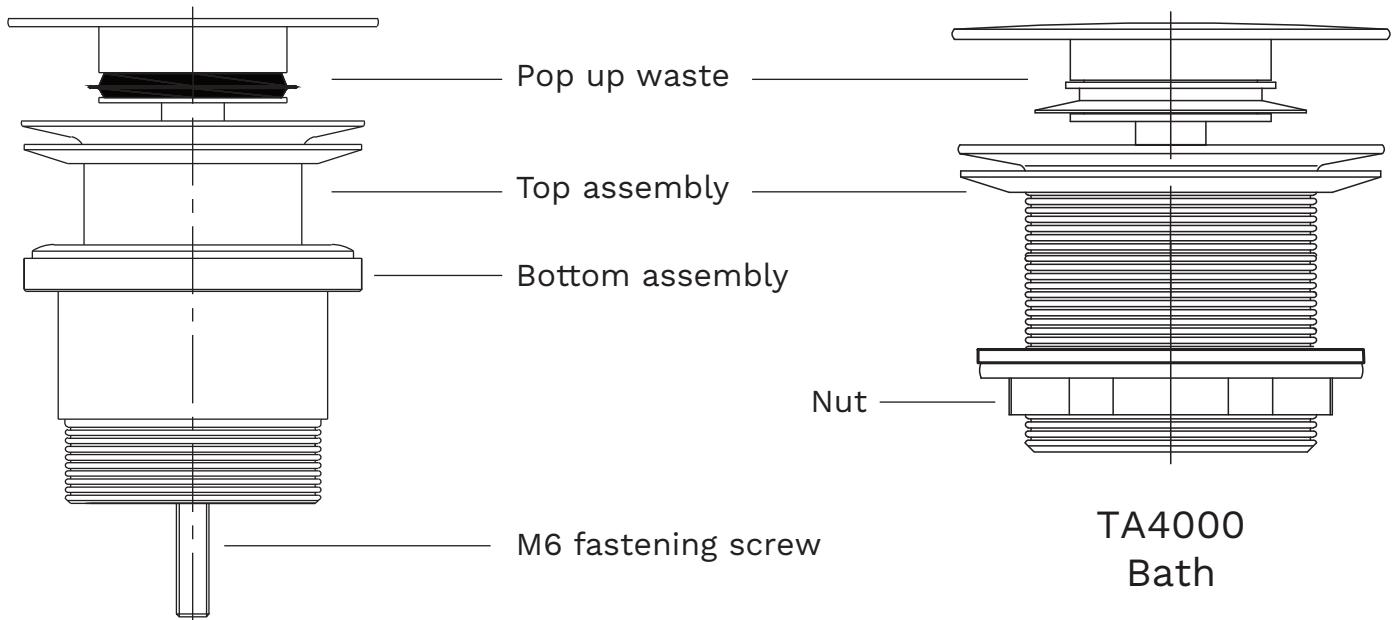

TA3240/ TA4032
Basin

Instruction:

1. Carefully remove the pop up waste assembly from the waste by unscrewing the piston.
DO NOT REMOVE THE PACKING (plastic lid), TO AVOID DAMAGES.
2. Align and assemble the top assembly above the basin/bath.
3. Place the bottom assembly under the basin/bath.
 - For Basin: fasten the waste together with M6 screw from the top with screw driver. Do not use electric or cordless drivers.
 - For Bath: fasten the waste together with nut from the bottom.
4. Assemble the pop up waste assembly.
5. Check the basin for leak.