

Brodware

1.7003.00.0.XX / 1.7003.02.0.XX

32mm Click Clack Waste

Installation Guide

NOTE: This waste requires a hole size of $\text{Ø}42\text{-}46\text{mm}$ in the basin, and connects to a 32mm trap.

1) Unscrew the threaded waste body from the waste collar, and remove the larger bottom rubber seal.


2) With the smaller top rubber still on the threaded waste body, insert the top half of the waste into the hole in the basin.

3) From the underside of the basin, slide the larger bottom rubber seal over the thread of the waste until it is pressing against the bottom of the basin. Screw on the waste collar until it is compressing the rubbers, and has created a seal.

DO NOT OVERTIGHTEN. Connect waste trap.

4) Check for leaks

5) Check functionality. Ensure that water exits the basin by pouring a small amount of water around the top of the waste. If the recess for the waste is not allowing the waste to sit at an adequate height to allow water to properly drain the water, remove the smaller top rubber seal, and use a suitable flexible sealant.

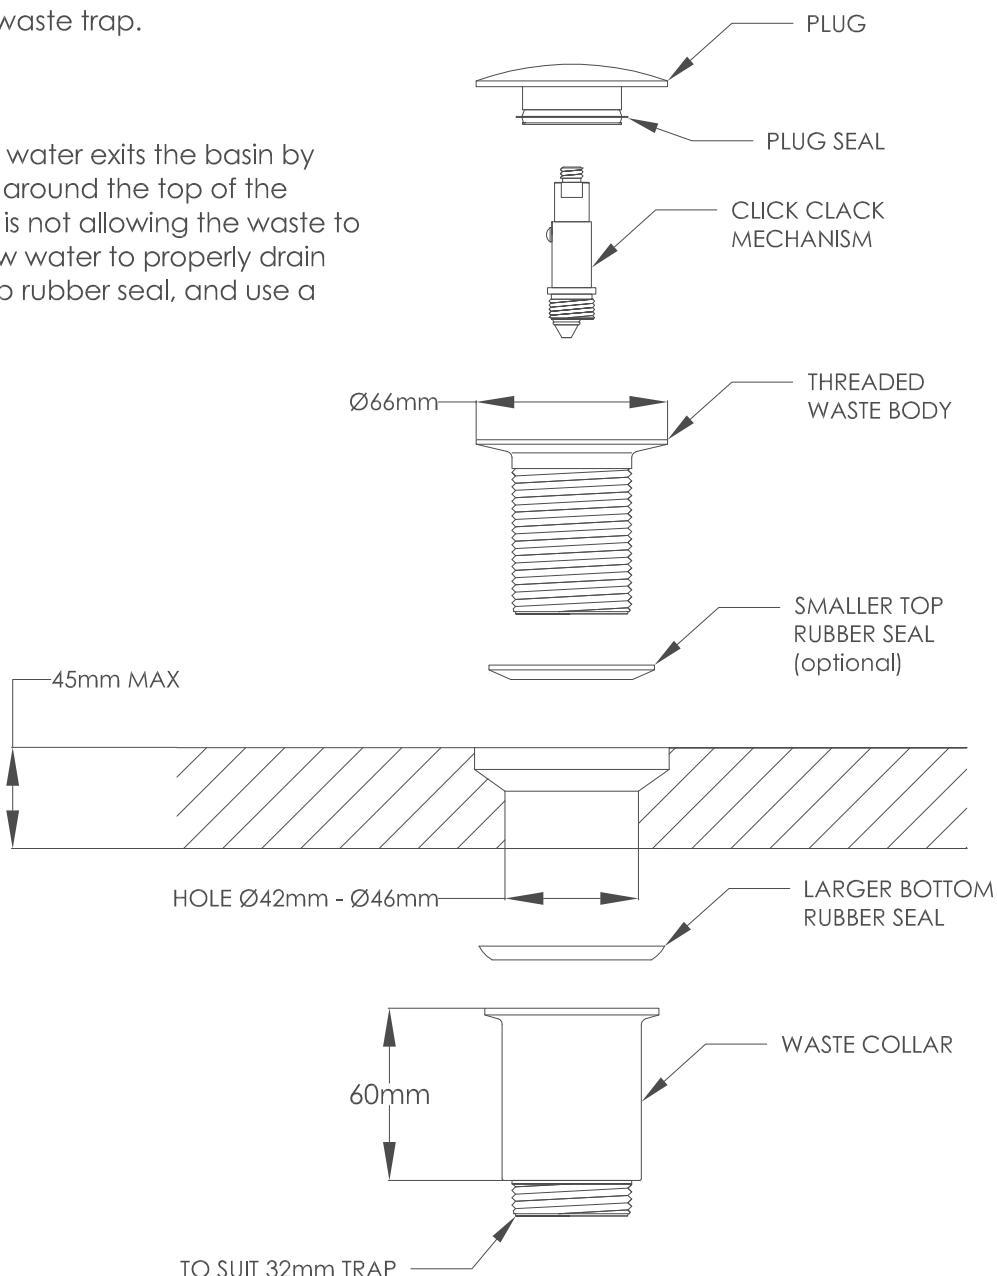

IC17003000XX 32026003